



- Hard click on white button:
Tailcap 100%-off-40%-
off-10%-off-SOS-off-8Hz
strobe-off,
- When on:
Light press 100%-40%-10%-
SOS-8hz cyle

Nederlands



- Hard drukken op de witte knop:
100% - uit - 40% - uit - 10% - uit
- Wanneer ingeschakeld:
Licht indrukken
100%-40%-10%-SOS-8hz cyle

Deutsch



- Harter Klick auf die weiße
Schaltfläche:
100% - aus - 40% - aus - 10%
- aus
- Wenn eingeschaltet:
Leichtes drücken
100%-40%-10%-SOS-8hz cyle

Español



- Haga clic en el botón blanco:
100% - apagado - 40% -
apagado - 10% - apagado
- Cuando esté activado:
Presione ligeramente
100%-40%-10%-SOS-8hz cyle



- Appui fort sur le bouton blanc: 100% - désactivé - 40% - désactivé - 10% - désactivé
- Lorsqu'il est allumé: Appui léger 100%-40%-10%-SOS-8hz cyle



- Fare clic sul pulsante bianco: 100% - off - 40% - off - 10% - off
- Quando è acceso: Pressione leggera 100%-40%-10%-SOS-8hz cyle



- Clique no botão branco: 100% - desligado - 40% - desligado - 10% - desligado
- Quando ligado: Pressione levemente 100%-40%-10%-SOS-8hz cyle



- Klik hårdt på den hvide knap: 100% - off - 40% - off - 10% - off
- Når den er på: Let tryk 100%-40%-10%-SOS-8hz cyle

nedis

Norsk



Svenska



Suomi



Ελληνικά





- Silný stisk bílého tlačítka:
100% - vypnuto - 40% - vypnuto - 10% - vypnuto
- Je-li zapnuto:
Lehký stisk 100%-40%-10%-SOS-8hz cyklus

Magyar



- Erős kattintás a fehér gombra:
100% - kikapcsolás - 40% - kikapcsolás - 10% - kikapcsolás
- Bekapcsolt állapotban:
Könnyű nyomás 100%-40%-10%-SOS-8hz cyle

Română



- Faceți clic greu pe butonul alb:
100% - scade la 40% - scade la 10% - oprit
- Când este pornit:
Presă ușoară 100%-40%-10%-SOS-8hz cyle

Eesti



- Kõva klõps valgel nupul:
100% - off - 40% - off - 10% - off
- Kui sisse lülitatud:
Kerge press 100%-40%-10%-SOS-8hz cyle



T: +31 (0)73-5991055
W: support.nedis.com

NEDIS B.V.
De Tweeling 28
5215 MC 's-Hertogenbosch
The Netherlands

