

nedis

Cat6 Wall Box

Surface Mount U/UTP

CCGB89100WT



Package content

Fixing Method




1

Remove the circuit board from the buckle position of the bottom box



2

Pass the screws through the bottom box, place the product at the position specified by the customer for fixing, tighten the screws, then install the circuit board back to the original bottom box, and proceed with wiring.

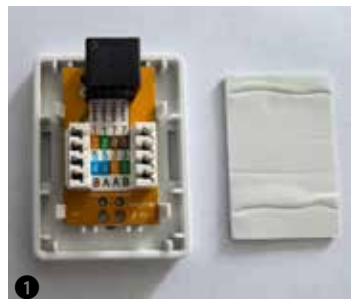

1

Take out the double-sided tape



2

Stick one side of the double-sided tape to the back of the bottom box, and then stick it to the desktop specified by the customer

Double-Sided Tape Fixing. Customers can choose to wire first or fix first.


Wiring



4 Open the ethernet surface mount box




5 Push the wires into the IDC according to T568A/T568B color code

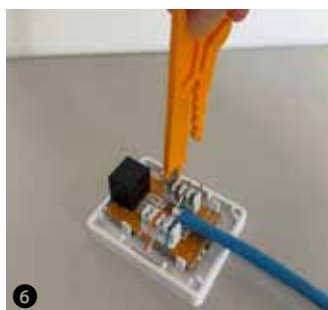

6 Impact and fix the wires by 110 or Krone impact tools, cut off the excess wires




7 Trim the exposed wire cores

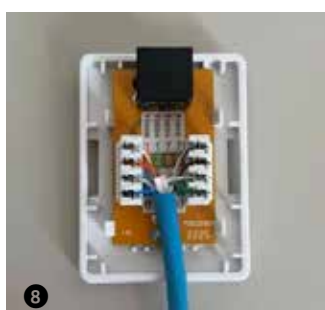

8 Trimming completed



9 Use the cable ties for easy cable management

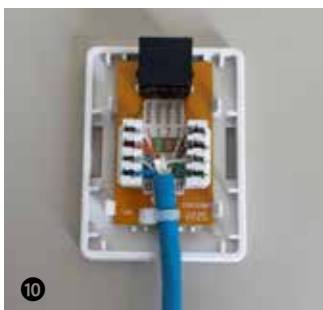

10 Cut off the excess cable ties



11 Assemble the upper cover



For more information see the extended manual online:
<https://cdn.nedis.com/manuals/html/CCGB89100WT>

Nedis BV
Reitscheweg 1
5232 BX 's-Hertogenbosch
The Netherlands
service@nedis.com

